



# FCC information

EN

## FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

In accordance with FCC requirements, changes or modifications not expressly approved by Thomson Inc. could void the user's authority to operate this product.

This device generates and uses radio frequency (RF) energy, and if not installed and used properly, this equipment may cause interference to radio and television reception.

If this equipment does cause interference to radio or television reception (which you can determine by unplugging the unit), try to correct the interference by one or more of the following measures:

- Re-orient the receiving antenna (that is, the antenna for the radio or television that is "receiving" the interference).
- Move the unit away from the equipment that is receiving interference.
- Plug the unit into a different wall outlet so that the unit and the equipment receiving interference are on different branch circuits.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet, "How To

Identify and Resolve Radio TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, DC 20402. Please specify stock number 004-000-00345-4 when ordering copies.

## For Your Records

In the event that service should be required, you may need both the model number and the serial number. In the space below, record the date and place of purchase:

Date of Purchase:

Place of Purchase:

## Service Information

This product should be serviced only by those specially trained in appropriate servicing techniques. For instructions on how to obtain service, refer to the warranty included in this Guide.



- Please respect the environment! Before throwing any batteries away, consult your distributor who may be able to take them back for specific recycling.



# Contents

EN

 
General controls-----	2-3	Recording quality / condition-----	10
The display-----	4	Other functions-----	11
Display messages-----	5	Erasing file / folder-----	12
Before you begin-----	6	Troubleshooting tips-----	13
Setting the time-----	7	More information-----	14
Basic operation-----	8	Warranty-----	15-17
Recording mode-----	9		

 <p>THE LIGHTNING FLASH AND ARROW-HEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF "DANGEROUS VOLTAGE" INSIDE THE PRODUCT.</p>	<p><b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.</p>
<p>SEE MARKING ON BOTTOM / BACK OF PRODUCT</p>		

**WARNING:** TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

# General controls

EN

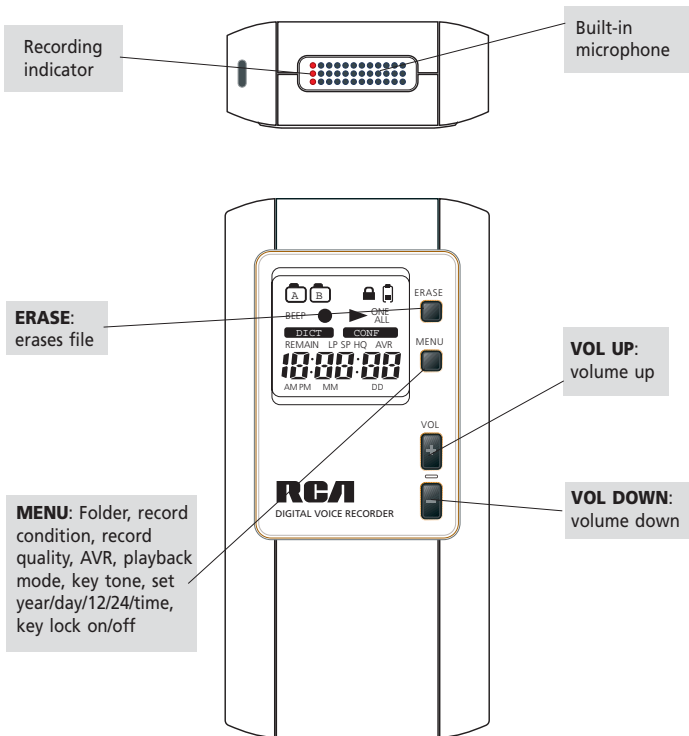

Note: Auto power off- the unit will turn off automatically if left idle for 3 minutes.

# General controls

EN

 
**REC:** starts/  
pauses recording

**STOP:** stops  
playback/  
recording. Turns  
off the unit.

**PLAY:** turns the  
unit on. Starts/  
pauses playback.


**FORWARD:** skips and  
searches forward.  
Selects/Browses under  
menu mode

**REVERSE:** skips and  
searches backward.  
Selects/Browses under  
menu mode




external  
microphone  
jack

 Connects  
headphones



# The display

 EN

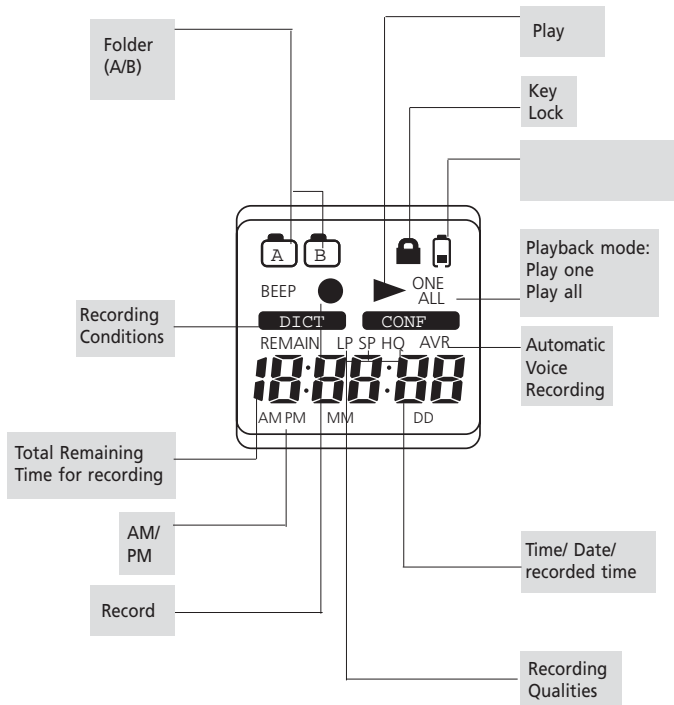

# Display messages

EN

ALL	Select all (Introductory Play back & Erasing All Files)
FIL:01	File one
del:01	Delete (Erasing Selected File)
01 01	Month / day entry mode.
12 Hr	12 hour time display mode.
12:00	Time entry mode
OFF	Off (Automatic Voice Recording or Beep)
ON	On (Automatic Voice Recording or Beep)
SEN 06	Sensitivity Level (AVR)
VOL:13	Volume (Setting Volume)
2003	Year (Setting Year)
HOLD	key locked

\* ( )- You can find the mentioned displays as you set/ operate them.

# Before you begin

EN

## Power supply

This unit can be operated by 2 “AAA” batteries.

## Installing Batteries (not included)

1. Slide the battery compartment door to the bottom and lift up the door to open.
2. Insert 2 “AAA” batteries with polarities matching indications.
3. Replace the battery compartment door.

Refer to the battery level indicator on display for batteries level. Replace with new batteries when this indicator is shown.



## Using headphones and external microphone (not included)


- When headphones are connected, sound output from speaker will be muted.
- When external microphone is connected, no record can be made from built-in microphone.

## Auto power shut down

The unit will automatically turn off if left idle for 3 minutes.

## Keys lock

This feature avoids accidental key activation during recording or playback.

1. Press and hold **MENU** for 2 seconds, **LOCKED** will be shown on display. (LOCK icon  will lit)
2. Press and hold **MENU** for 2 seconds again to unlock keys.



### Tip:

Keys lock function can be activated in any mode.

## Tones

You can activate this feature so that beep sound can be heard whenever you press on any button except during playback and recording.

1. Press **MENU** repeatedly until **BEEP** shows on display.
2. Press **REVERSE** or **FORWARD** to set beep sound ON/ OFF.
3. Press **MENU** to confirm selection.





# Setting the time

EN

## Year/Date/12/24/Time Setting

 
With this function, you can always read on the display the recording date and time of your recorded messages. Follow the steps below for time setting.

You can still use this unit for normal recording without setting the time. However, no correct recording date and time can be referred for your recorded messages and the display will keep flashing when the unit is turned off.

1. Turn on the unit.
2. Press **MENU** repeatedly to enter Time setting mode.
3. When "2003" flashes, press **REVERSE** or **FORWARD** to change the year, press **MENU** to confirm.
4. Once the year is entered, the digits in the month field will blink (default is 01). Press **REVERSE** or **FORWARD** to increase/decrease the number, press **MENU** to confirm.



5. Once the month is entered, the digits in the day will blink (while the digits in the month field stop blinking). Press **REVERSE** or **FORWARD** to increase/decrease the number, press **MENU** to confirm.
6. Once the date is entered, you can choose between 12/24 hour clock display by pressing **REVERSE** / **FORWARD**, then press **MENU** to confirm.
7. Once the time is entered, the digits in the hour field will blink (default setting is 12 (12 hour mode) & 0 (24 hour mode). Press **REVERSE** or **FORWARD** to increase/decrease the number, press **MENU** to confirm.



### Tip:

Press **STOP** to exit to Stop mode.

# Basic operation

EN

## Manual recording

1. In **STOP** mode, select a folder (A/B).
2. Press **RECORD** to start recording.  
(recording time will be displayed once you press **RECORD**)
3. To pause recording, you can press **RECORD** once, press again to resume recording.
4. To stop recording, press **STOP**.



### Tip:

To view the remaining time and other recording information, you may press **PLAY** during recording.

## Normal Playback

1. In Stop mode, select a folder (A/B).
2. Select file by pressing **REVERSE** or **FORWARD**.
3. Press **PLAY** to start playback.
4. Press **PLAY** to pause playback, press again to resume.
5. You can press **VOL UP (+)** or **VOL DOWN (-)** to adjust the volume.
6. Press and hold **REVERSE** or **FORWARD** to make quick search within a file.
7. Press **REVERSE** or **FORWARD** once to skip one file forward or backward.
8. Press **STOP** to stop playback.

## Folder selection

You can select a specific folder (A/B) for recording. Default is folder A. Refer to p.11 for details.

## Recording quality (LP/SP/HQ)

You can select between three recording qualities. Default is SP. (Refer to Recording quality / condition section for details.)

## Recording condition (DICT/CONF)

You can select between two recording conditions. Default is DICT. (Refer to Recording quality / condition section for details.)

## Playback mode

You can select to play one file at a time (Play one) or play all files in the folder continuously (Play all). Default is Play one.

## Introscan

You can quickly scan the beginning 3 seconds of each file in a folder. Refer to p.11 for details.

# Recording mode

EN

## Setting Recording Mode

You can select between two recording modes - manual recording and AVR (automatic voice recording).

### 1. Manual Recording

Please refer to page 8.

### 2. AVR (Automatic Voice Recording)

This feature allows the unit to sense sound and to record only when you are speaking into the microphone. When dictation stops for about 3 seconds, recording will stop and then start again automatically when you resume dictation.

1. Select a folder (A/B).
2. Press **MENU** until AVR shows on display.
3. Press **REVERSE** or **FORWARD** to toggle between AVR on and AVR off.
4. Press **STOP** to exit to STOP mode.
5. Press **RECORD** to enter AVR mode.



6. Start dictation. Recording starts automatically.

7. During recording, adjust the sensitivity of the microphone by pressing **VOL UP** and **VOL DOWN**, SEN with sensitivity value shows on display (e.g. increase sensitivity value when recording source is far from the unit or the recording environment is quiet).

8. Press **STOP** to end AVR recording.

9. Repeat step 2 and select AVR OFF for de-selection.



#### Tip:

The first syllable or two may be lost when you start recording because this 'sound' is used to turn on the AVR feature. It is a good practice to make some 'sounds' or say a short word to activate the AVR before you begin actual dictation.

# Recording quality / condition

EN

## Setting Recording Quality

You can select between three recording qualities. Default is SP.

### Definition

- **SP** (Standard Play) - allows about 320 min recording on RP5013, 680 min recording on RP5015.
- **LP** (Long Play) - allows about 440 min recording on RP5013, 910 min recording on RP5015.
- **HQ** (High Quality) - allows about 120 min recording on RP5013, 270 min recording on RP5015.

1. Press **MENU** until SP / LP / HQ show on display.
2. Toggle between SP, LP and HQ by pressing **REVERSE** or **FORWARD**.
3. Confirm selection by pressing **MENU** or **STOP**.

LP SP HQ

## Setting Recording Condition

You can select between two recording conditions. Default is DICT.

### Definition

- **CONF** (Conference) - in a more open area and recording source is far from the unit.
- **DICT** (Dictation) - in a more enclosed area and recording source is close to the unit.

1. Press **MENU** twice until DICT or CONF show on display.
2. Select recording condition by pressing **REVERSE** or **FORWARD**.
3. Confirm selection by pressing **MENU**. (You may press **STOP** to exit from further selection.)

DICT

CONF



### Tip:

For conferences, to obtain optimum recording quality, place the recorder with the microphone freely exposed to the sound source as close as convenient. A built-in automatic recording level control will set the optimum record level during manual recording. Avoid recording near unwanted noise sources, such as air conditioners or fans.

# Other functions

EN

## IntroScan

This feature allows playback of the beginning 3 seconds of each file in a folder.

1. Select a folder (A/B).
2. Press **REVERSE** or **FORWARD** until ALL shows on display.
3. Press **PLAY** to start introductory playback, "SCAN" shows on display.
4. Press **PLAY** to start playing desired file.
5. Press **STOP** to exit Intro Scan sooner.



## Play one / play all

You can choose to play a specific file or all files in a folder.

1. In STOP mode, press **MENU** repeatedly until ONE appears on display.
2. Press **REVERSE** or **FORWARD** to toggle between ONE and ALL.

## Select folder

You can select a specific folder (A/B) for recording. Default is folder A.

1. Press **MENU** in stop mode.
2. Folder A or B icon will blink on display.
3. Press **REVERSE** or **FORWARD** to select a folder.
4. Press **STOP** to exit to stop mode in the desired folder.



### Note:

You can record up to 99 files in one folder, not exceeding 198 files in total.

# Erasing file / folder

EN

## Erasing selected file

You can delete a file by the following steps:

1. Select a folder (A/B)
2. Select a file.
3. Press **ERASE** once and **DEL** will show on the screen.
4. Press and hold **ERASE** to confirm deleting or press **STOP** to cancel.



### Tip:

File numbers that come after erased one will be moved forward by one automatically.

## Erasing all files in a folder

You can delete all files in a specific folder by the following steps:

1. Turn on the unit.
2. Select a folder (A/B).
3. In Stop mode, press **FORWARD** continuously until "ALL" appears on display.
4. Press **ERASE** and "del" will blink on display.
5. Press and hold **ERASE** for about 2 seconds, all files in the selected folder will be erased completely (or press **STOP** to cancel erasing all files).



# Troubleshooting tips

EN

## **Unit doesn't turn on**

- Check that batteries are properly inserted and not exhausted.
- Make sure battery compartment door is properly closed.
- Make sure the **LOCK** function is not activated.

## **Display keeps flashing when unit is off**

- You have not set the time. Refer to section on Time Setting.

## **Cannot record**

- Make sure the **LOCK** function is not activated.
- Make sure the memory is not full.
- Check the total files in all folders not exceeding 198.
- You have recorded 99 files in one folder. Try record in a new folder.

## **Cannot show recording date and time during playback**

- You have not set the date and time before recording. Refer to the section on 'Time Setting'.

## **No sound from the speaker during playback**

- Make sure the volume level is not set to 0.
- Headphones is connected.

## **Cannot activate the unit after pressing ON keys**

- There may be software problem. Remove batteries and wait for 30 seconds to reset the unit, then re-install batteries and try again.

## **Recordable time becomes shorter**

- You have set the recording quality to 'High Quality', refer to section 'Setting Recording Quality'.

## **Cannot perform playback**

- Make sure you have selected folder with recorded messages.
- Make sure the **LOCK** function is not activated.

## **Cannot erase recorded file(s)**

- Make sure you follow each step under section "Erasing Selected File" carefully.

# More information

EN

## Precautions for the Unit

- Do not use the unit immediately after transportation from a cold place to a warm place; condensation problem may be resulted.
- Avoid shock to the unit especially during recording. Recorded data can be damaged.
- Do not store the unit near fire, places with high temperature or places with direct sunlight.
- Do not operate or store unit in places with frequent static electricity or electrical noise (e.g. speaker, TV set).
- Clean the unit with a soft cloth or a damp chamois leather. Never use solvents.
- The unit must only be opened by qualified personnel.
- Do not expose this appliance to rain or moisture.

## Precautions for Batteries

- If you do not use the unit for more than one month, be sure to remove the batteries to avoid leakage.
- When installing batteries, be sure that the polarities are correct. Reversing polarity may cause personal injury and damage to the batteries.
- Never mix new batteries with old ones. Do not mix battery types.
- Discard leaking batteries immediately. Leaking batteries can cause skin burns or other personal injury.
- Do not dispose of in fire.
- Do not charge batteries which are not intended to be recharged.

## Power Supply

- (battery power) 2 x "AAA"



# U.S. limited warranty

EN

## **What your warranty covers:**

- Defects in materials or workmanship.

## **For how long after your purchase:**

- One year from date of purchase.

The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.

## **What we will do:**

- Provide you with a new, or at our option, a refurbished unit. The exchange unit is under warranty for the remainder of the original product's warranty period.
- Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the product is within the warranty period must be presented to obtain warranty service. For rental firms, proof of first rental is also required.

## **How to make a warranty claim:**

- Properly pack your unit. Include any cables, etc., which were originally provided with the product. We recommend using the original carton and packing materials.
- Include evidence of purchase date such as the bill of sale. Also print your name and address and a description of the defect. Send via standard UPS or its equivalent to:

**Thomson Inc.  
Product Exchange Center  
11721 B Alameda Avenue  
Socorro, Texas 79927**

- Insure your shipment for loss or damage. Thomson accepts no liability in case of damage or loss en route to Thomson.
- Pay any charges billed to you by the Exchange Center for service not covered by the warranty.
- A new or refurbished unit will be shipped to you freight prepaid.

## **What your warranty does not cover:**

- Customer instruction. (Your Owner's Manual provides information regarding operating Instructions and user controls. For additional information, ask your dealer.)
- Installation and setup service adjustments.
- Batteries.
- Damage from misuse or neglect.
- Products which have been modified or incorporated into other products.
- Products purchased or serviced outside the USA.
- Acts of nature, such as but not limited to lightning damage.

# U.S. limited warranty

EN

## **Limitation of Warranty:**

- **THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY THOMSON INC., ITS AGENTS OR EMPLOYEES SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.**
- **REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. THOMSON INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF INDIANA. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.**

## **How state law relates to this warranty:**

- Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.
- This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

## **If you purchased your product outside the USA:**

This warranty does not apply. Contact your dealer for warranty information.

# Canadian limited warranty

EN

Thomson multimedia Ltd. warrants to the purchaser or gift recipient that if any manufacturing defect becomes apparent in this product within 1 year from the original date of purchase, it will be replaced free of charge, including return transportation.

This warranty does not include damage to the product resulting from accidents, misuse or leaking batteries.

Should your product not perform properly during the warranty period, either:

1. Return it to the selling dealer with proof of purchase for replacement,  
OR
2. Remove the batteries (where applicable), and pack product complete with accessories in the original carton (or equivalent). Mail prepaid (with proof of purchase) and insured to:

**Thomson multimedia Ltd.  
6200 Edwards Blvd.,  
Mississauga, Ontario, L5T 2V7  
Canada**

The provisions of this written warranty are in addition to and not a modification of or subtraction from the statutory warranties and other rights and remedies contained in any applicable legislation, and to the extent that any such provisions purport to disclaim, exclude or limit any such statutory warranties and other rights and remedies, such provisions shall be deemed to be amended to the extent necessary to comply therewith.

If you are unable to find a qualified servicer for out of warranty service, you may write to:

Thomson Inc.  
P.O. Box 0944  
Indianapolis, Indiana, U.S.A., 46206-0944

Attach your sales receipt to this booklet for future reference. This information is required if service is needed during the warranty period.

PURCHASE DATE

NAME OF STORE